
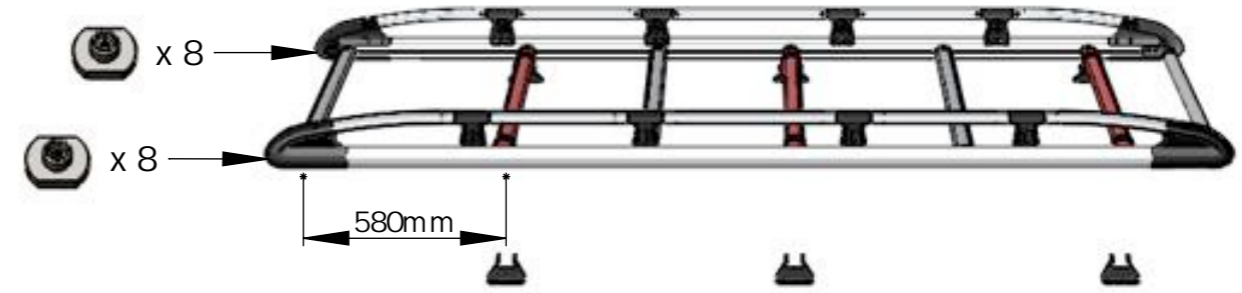




A598

**RENAULT KANGOO MAXI 2008-
MERCEDES CITAN L3 2012-
TWIN DOORS**

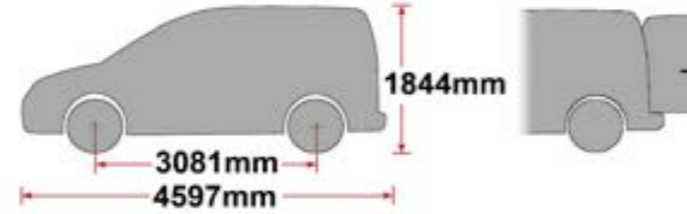



A599

**NISSAN NV200
TWIN DOORS**

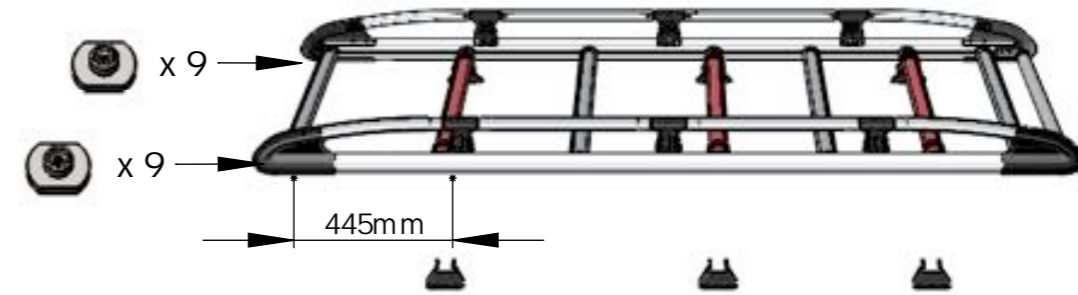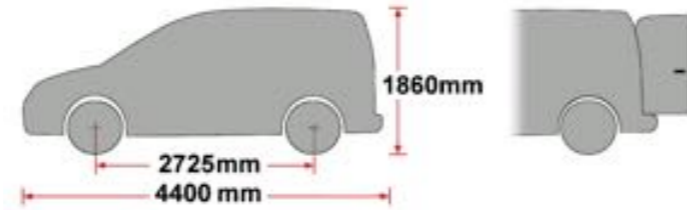



A617

**NISSAN NV200
TAILGATE**

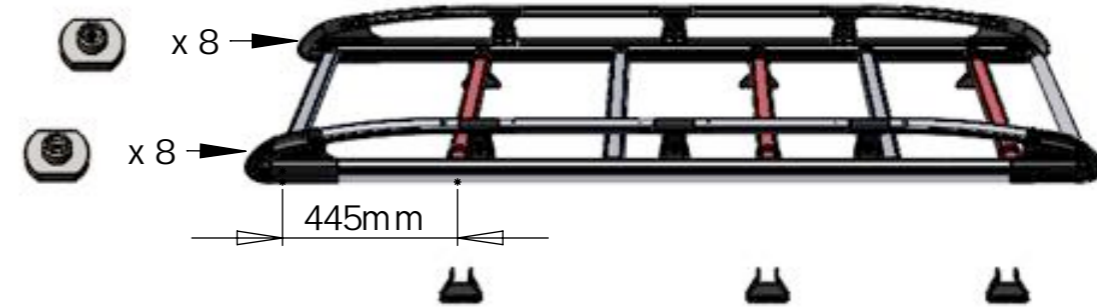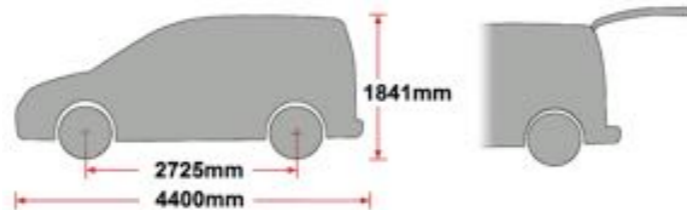

A586



**VW CADDY MAXI 2007 - 2010
STANDARD ROOF, TWIN DOORS**

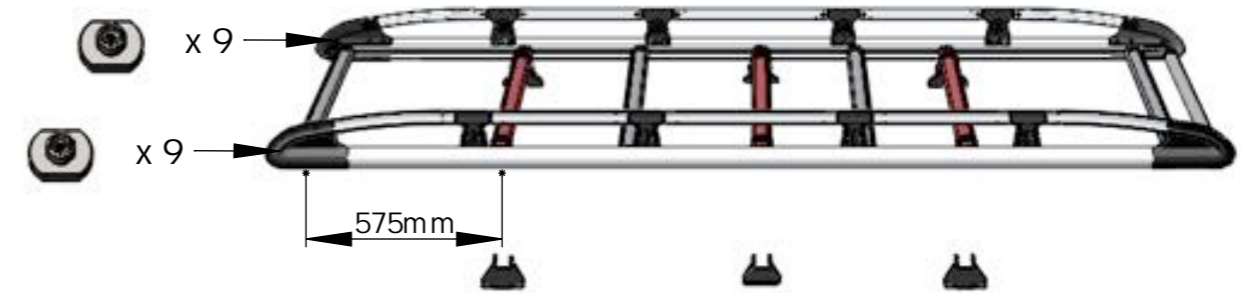

A595



**VW CADDY MAXI 2007 - 2010
STANDARD ROOF, TAILGATE**

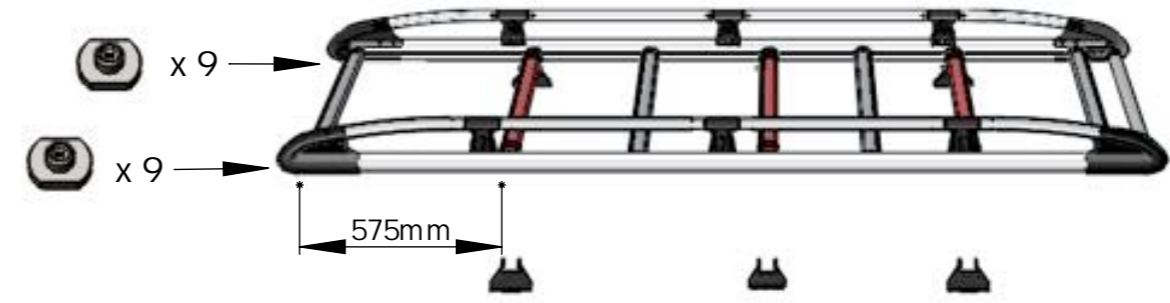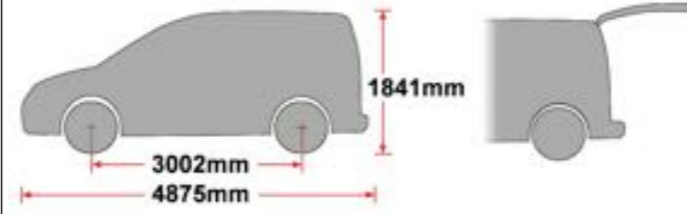



EXT09 x 6



MS176 x 6



PS095 x 4



PS096 x 2



PS089 x 1



PS090 x 1



PS023 x 6



29201112 x 4



FB012 (M8 x 65) x 12



FS074 (M8 x 20) x 4



FS061 (M8 x 35) x 4




FS062 (M8 x 25) x 2



FS059 (M8 x 25) x 18


(1:1)

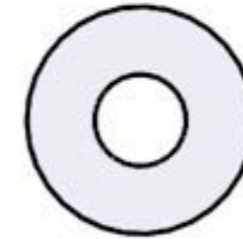

FW002 (M8) x 30



FNO06 (M8) x 12

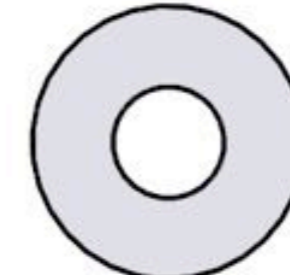


PS153 x 6




FW009 (M8) x 6



PS207 x 6

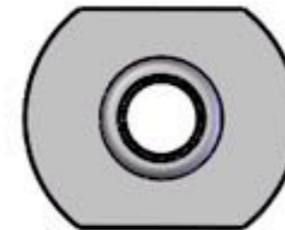

FNO23 (M8) x 18

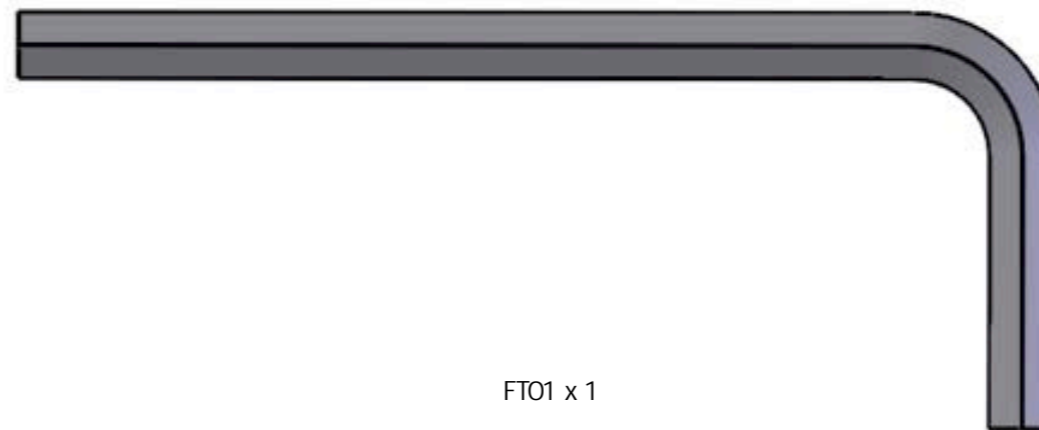

FT01 x 1



13mm x 2

