
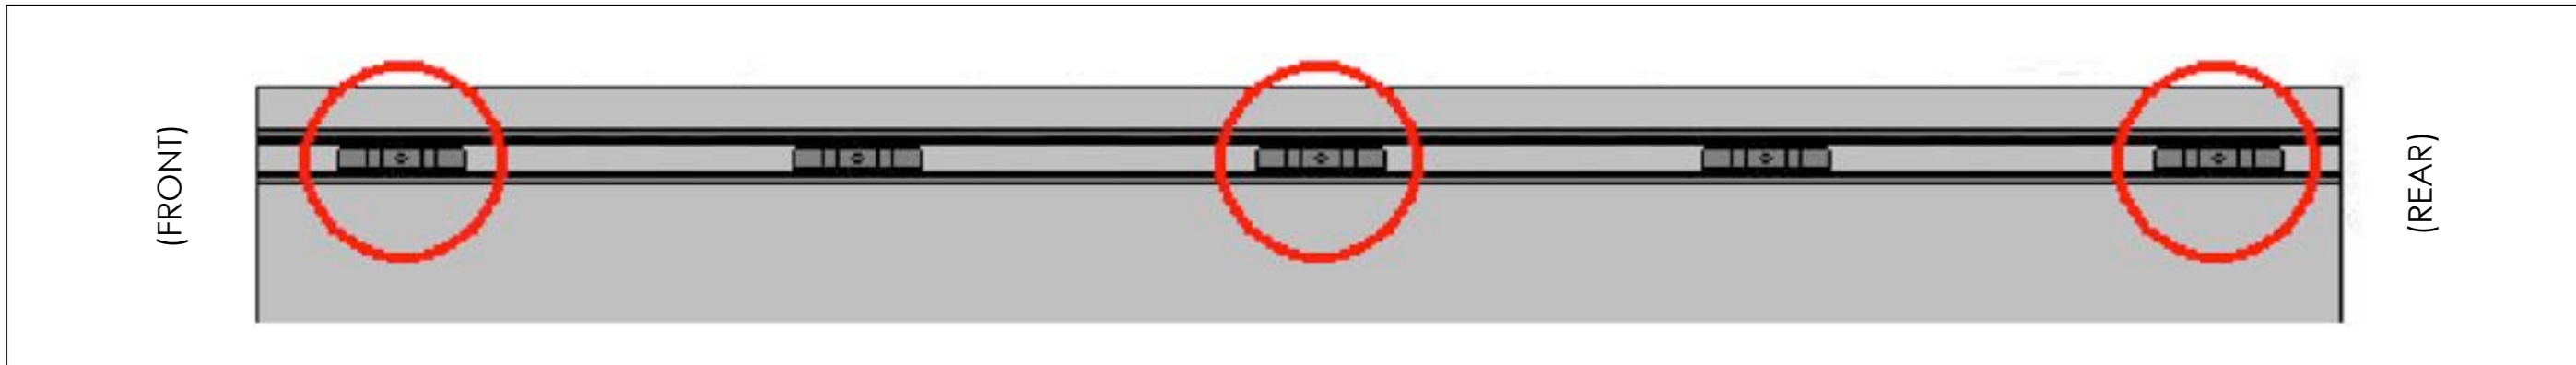

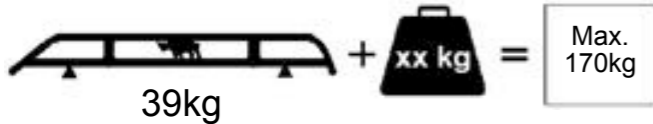
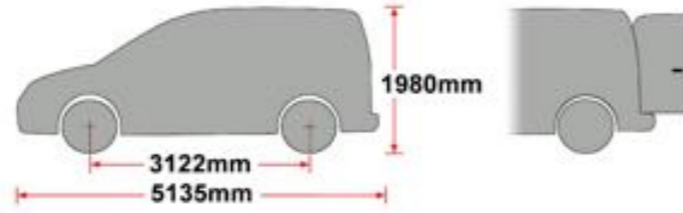
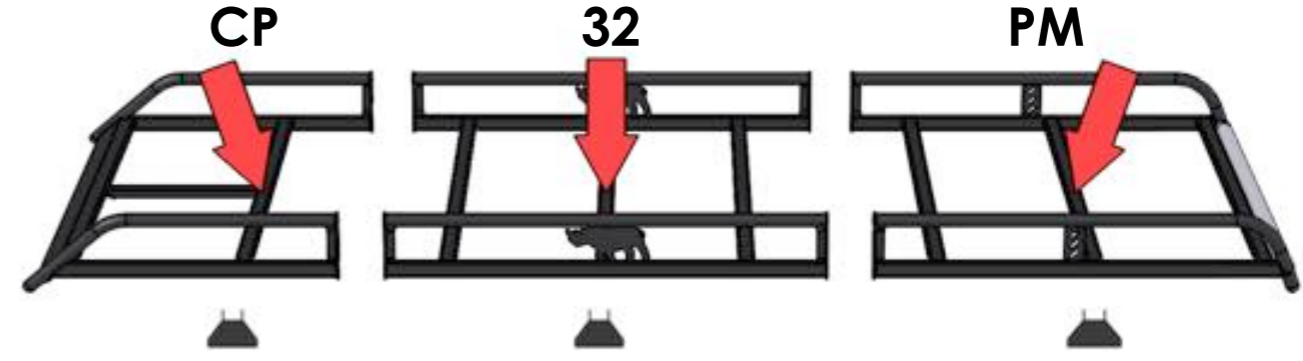



<h1>EU/R 551</h1>  <p>37kg + xx kg = Max. 170kg</p>	<p>JUMPY/DESPATCH/SCUDO/EXPERT 2008- SWB, LOW ROOF, TWIN DOORS</p>  <p>1980mm 3000mm 4805mm</p>	 <p>CN 30 PM</p>
--	--	--





<h1>EU/R 552</h1>  <p>xx kg =</p>	<p>JUMPY/DESPATCH/SCUDO/EXPERT 2008- SWB, LOW ROOF, TAILGATE</p>	<p>(TBA)</p>
--	---	--------------



<h1>EU/R 553</h1>  <p>39kg + xx kg = Max. 170kg</p>	<p>JUMPY/DESPATCH/SCUDO/EXPERT 2008- LWB, LOW ROOF, TWIN DOORS</p>  <p>1980mm 3122mm 5135mm</p>	 <p>CP 32 PM</p>
--	--	---

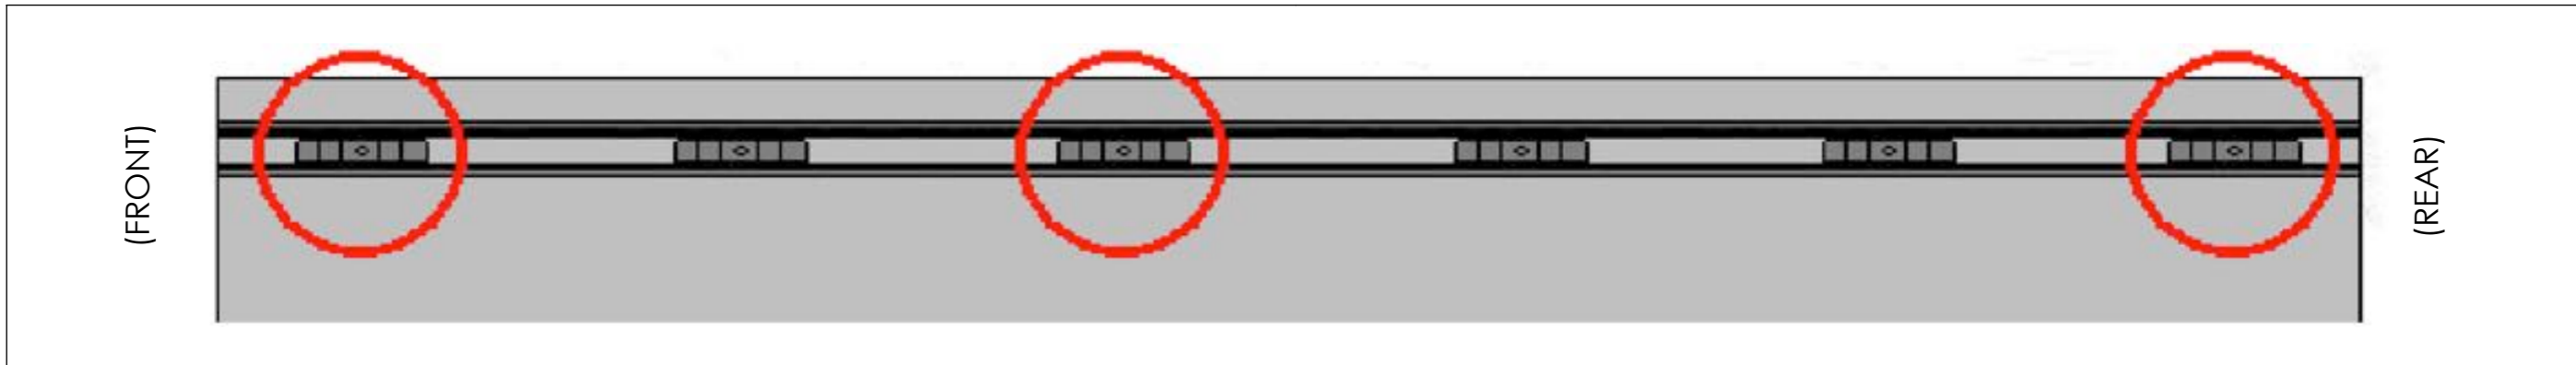

<h1>EU/R 554</h1>  <p>xx kg = <input type="text"/></p>	<p>JUMPY/DESPATCH/SCUDO/EXPERT 2008- LWB, LOW ROOF, TAILGATE</p>	<p>(TBA)</p>
---	---	--------------





MS161 x 6



MS174 x 4



MS175 x 2




PS023 x 6

(1:1)



FB003 (M8 x 65) x 12

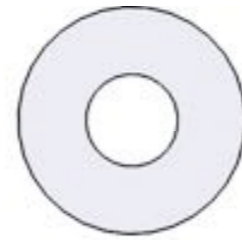

FW002 (M8) x 40



FN006 (M8) x 20




FS041 (M6 x 16) x 6



FW008 (M6) x 6




FW001 (M6) x 6

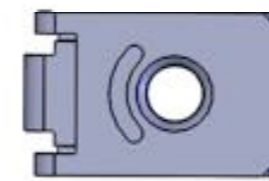

FN020 (M6) x 6



FS015 (M8 X 25) x 8

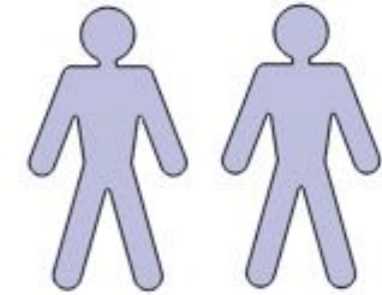

13mm x 2



10mm x 1

